



- B7: Schalter/Switch
- B1,2,...,6: Wahlschalter/Selector
- B8: Wahlschalter/Selector
- L1,2,...,6: Lampe/Lamp
- LA: Betriebslampe/Lamp
- LV: Lampe/Lamp
- M: Motor/Motor
- M0: Anschlussklemme/Terminal clamp
- R1,2,...,6: Heizkörper/Heating element
- R7,8: Heizkörper/Heating element
- T: Thermostat/Thermostat
- TS: Sicherheitsthermost/Safety thermostat

B1,B2,B3,B4,B5,B6							
position	0	6	5	4	3	2	1
HOTPLATE POWER	0 kW	2.6 kW	1.75 kW	1.3 kW	0.45 kW	0.34 kW	0.24 kW

B8							
POS. 0	POS. 1	POS. 2	POS. 3	POS. 4	POS. 5	POS. 6	
OFF	R1+R2+M	R1+R2	R2+M	R2	R1+M	R1.	